



H = POČET A DRUH SVORKOVNÍC V ROZVÁDZAČI

TYPOVÉ ZNAČENIE	POČET MODULOV	A	B	C	D	E	F	G	H
ERP18-4	72	675	418	715	451	120	6	25	4x N11 / 1x PE24
ERP18-5	90	809	418	849	451	120	6	25	5x N11 / 2x PE24
ERP18-6	108	943	418	983	451	120	6	25	6x N11 / 2x PE24